

Operator Card - 920AG Livestock Digital Weigh Center



Failure to heed may result in serious injury or death. DO NOT allow minors/inexperienced people to operate. DO NOT operate without all shields and guards in place. DO NOT use for purposes other than weight taking. DO NOT place fingers into slots or possible pinch points. DO NOT use any load bearing component that is worn beyond 5% of the original dimension. DO NOT use this product if any components are cracked. DO NOT exceed the rated load limit of the unit. DO NOT make alterations or modifications to the unit. DO NOT remove or obscure warning labels. Keep body and loose clothing away from moving parts.

POWER



FIGURE 1. Indicator Front Panel



To be the best by every measure®

230 W. Coleman St • Rice Lake, WI 54868 • USA
 TEL: 715-234-9171 • FAX: 715-234-6967
 www.ricelake.com • m.ricelake.com


Indicator Operations

Power Scale

1. Press the power switch to turn the indicator on or off (see Figure 1).


Enter Shrink

Shrink value is applied to the gross weight and is limited to 0.00-100.00 percent.

2. Press  any time to change the shrink percentage.


Enter Head Count

1. Insert ticket into the printer. Press FORWARD on the printer to secure the paper.
 2. Verify the scale is level. If not, it will blank the weigh display and go to a screen showing the current pitch and roll.

3. Press  to re-zero scale if required.


4. Load animals onto scale.


5. Press .

6. The indicator will prompt *Enter Head Count*. Using keypad, enter the number of animals and press . Once the scale is stable, head count, total weight and average weight per head will be displayed and ticket will begin to print and advance.

- Last weightment - Information for the previous group of animals on the scale.
- Current Weightment - Number of animals currently on the scale, their total weight and the average weight per animal.
- Totals - Total of all animals weighed in the current weigh batch and their average weight.

7. Unload the scale.
 8. Follow steps 4-7 until all animals from the current batch have been weighed.

9. Press  to complete current batch of animals. Summary information will be printed on the ticket and the ticket will be released.

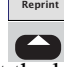10. Press  any time prior to starting the next batch to reprint the last ticket.

Softkey Operations

Weigh Animals

Press to begin weighing animals. Press each time a new group of animals is placed on scale, when a batch is in process.

Shrink

Allows input of a shrinkage value when weighing animals.

Batch Complete

Press to complete batch and print summary ticket.

Reprint

Prints last stored ticket until next batch is started.

Setup

Password protected - displays current pitch and roll angles, and allows input of the following:

- Reports - Turn transaction storing and reports On/Off.
- USB - Allows selection of USB device, downloading of database files, and adjusting of screen contrast.
- Change Password - Input password protection.
- Time/Date - Setting the system time and date.
- More - Press to display set 2 of the softkeys.
- Back - Returns to previous menu.
- % Delta Wt - Percentage change in printed weight before the Live Total is updated again.
- Exit - Returns display to main screen.

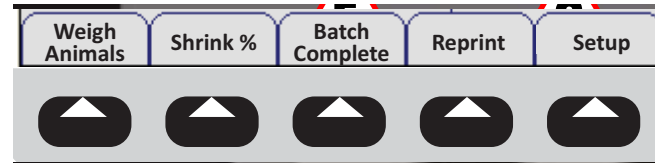


FIGURE 1. Softkey Assignment

Contrast Control

Adjusts display contrast depending on ambient light and ambient temperature.

Refer to Operator's Manual (PN 159192) for detailed instructions. Manuals are available on our web site at

www.ricelake.com/manuals